 


bp PART NO: MS-CROWN



 
Description: Microswitch

bp PART NO: V4NT7

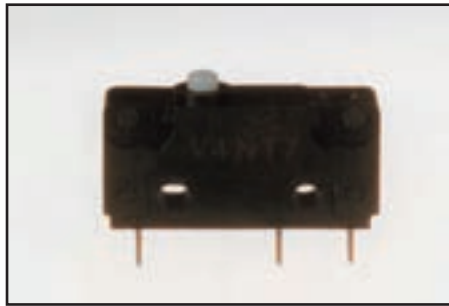

Description: Microswitch

bp PART NO: 83101

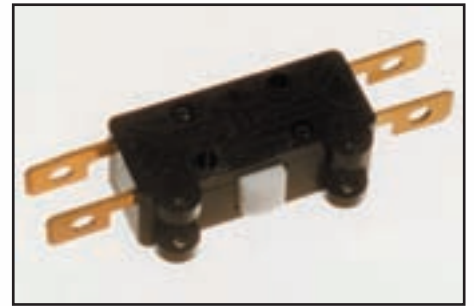


Description: Crouzet Microswitch

bp PART NO: 9007 A0-2




Description: Microswitch Square 'D'

 bp PART NO: E13

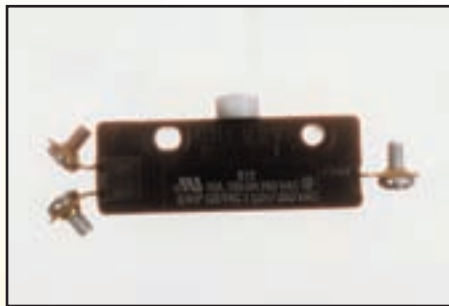

Description: Microswitch

 bp PART NO: E13-00K

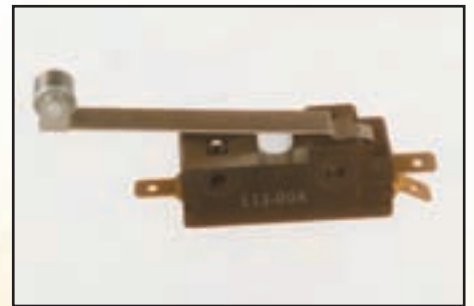

Description: Microswitch

bp PART NO: VCF



Description: Microswitch 6.3mm tabs

bp PART NO: VCFJ



Description: Microswitch 4.8mm tabs

bp PART NO: V3



Description: Microswitch Screw tabs

bp PART NO: VCF1831



Description: Microswitch

bp PART NO: VCSP



Description: Microswitch

bp PART NO: 3832510ZDR1



Description: Microswitch

MICROSWITCHES & FUSES

bp PART NO: 371018



Description: Microswitch

bp PART NO: V3YR



Description: Microswitch

bp PART NO: VCFJYR



Description: Microswitch

bp PART NO: VCFYR



Description: Microswitch

bp PART NO: VCFYR1



 
Description: Microswitch
(Long Lever)

bp PART NO: 38312014ZB2




Description: Microswitch

bp PART NO: K5

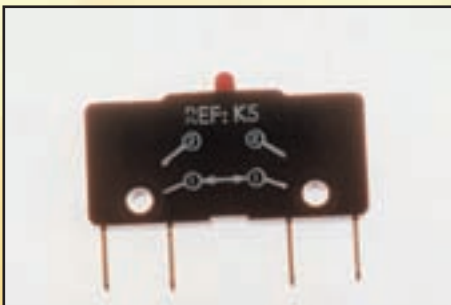


Description: Microswitch

 bp PART NO: K5C

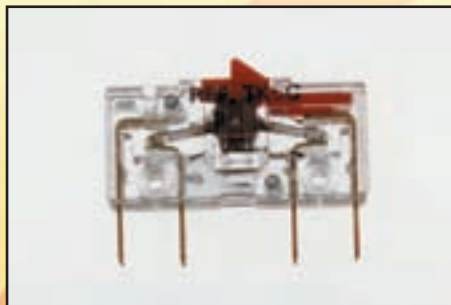

Description: Microswitch

 bp PART NO: K5Q

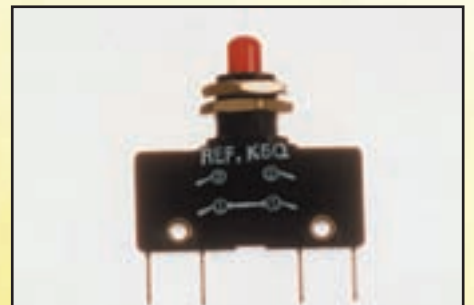

Description: Microswitch

bp PART NO: E79



Description: Cherry Microswitch

bp PART NO: QVCF9D



Description: Microswitch

bp PART NO: V13M



Description: Microswitch

bp PART NO: V3S



Description: Microswitch

bp PART NO: CT2QR-1021-A2



Description: Microswitch

bp PART NO: MS-TOYOTA



Description: Microswitch

bp PART NO: CT2QR-A2



 
Description: Microswitch

bp PART NO: CT2KR2-A2



Description: Microswitch

bp PART NO: BZ3RW822155555

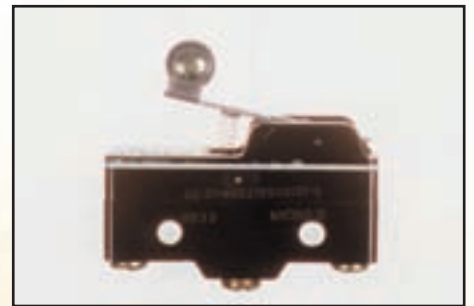

Description: Microswitch

bp PART NO: CT2KR-A2



Description: Microswitch

bp PART NO: CR1MR2



Description: Microswitch

bp PART NO: CR1MR1



Description: Microswitch

bp PART NO: CTK-A2



Description: Microswitch

bp PART NO: CR1M



Description: Microswitch

bp PART NO: CT2K-A2



Description: Microswitch

MICROSWITCHES & FUSES

bp PART NO: BZ-2RW863-A2



Description: Microswitch
(Long Lever)

bp PART NO: CT2D2-A2



Description: Microswitch

bp PART NO: CT2-A2



Description: Microswitch

bp PART NO: CT2C-A2



Description: Microswitch

bp PART NO: CT2Q-A2



Description: Microswitch

bp PART NO: HY88388



 
Description: Microswitch

bp PART NO: HY1150000



Description: Microswitch

bp PART NO: S800A

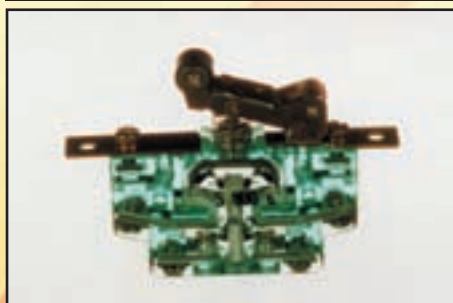

Description: Microswitch

bp PART NO: S800B



Description: Microswitch

bp PART NO: V9LR



Description: Microswitch

bp PART NO: 4BR



Description: Microswitch

bp PART NO: 4CR7



 
Description: Microswitch

bp PART NO: 4CRQR



Description: Microswitch

bp PART NO: VCFT

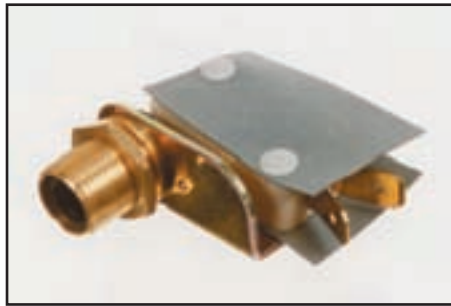

Description: Microswitch

bp PART NO: V3Q1



 
Description: Microswitch

bp PART NO: 2VCFQ1



Description: Microswitch

bp PART NO: 2VCFQ2

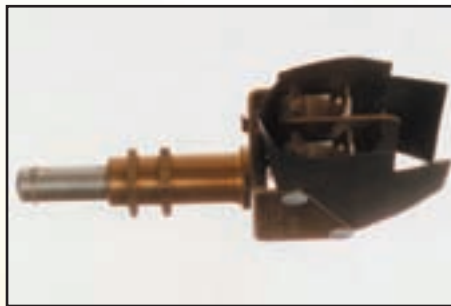

Description: Microswitch

bp PART NO: 2VCFQ3



Description: Microswitch

bp PART NO: B1



Description: Craig & Derricott
Microswitch

bp PART NO: BB19



 
Description: Craig & Derricott
Microswitch

bp PART NO: VL1



Description: Microswitch Actuator

bp PART NO: VAL2

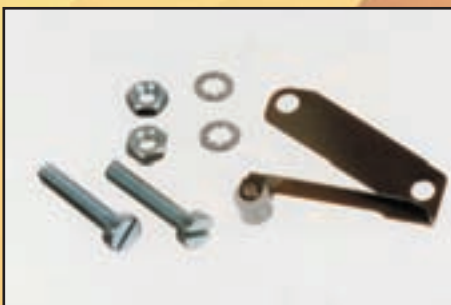

Description: Microswitch Actuator

bp PART NO: ACTUATOR-1



 
Description: Microswitch Actuator


bp ANTI-SURGE GLASS FUSE (32MM)
PART NO:

412-419
412-432
412-447
412-481

DESCRIPTION:

150 mA Anti-Surge Glass Fuse
250 mA Anti-Surge Glass Fuse
500 mA Anti-Surge Glass Fuse
1 Amp Anti-Surge Glass Fuse

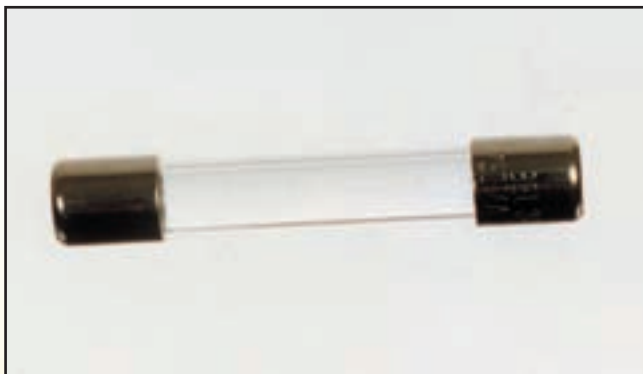
bp GLASS FUSES (32MM)
PART NO:

192-288
192-301
192-317

DESCRIPTION:

250 mA Glass Fuse
1 Amp Glass Fuse
1.5 Amp Glass Fuse


bp BUSS FUSES (37MM)
PART NO:

BLF/15
BLF/25
BLF/30

DESCRIPTION:

15 Amp Buss Fuse
25 Amp Buss Fuse
30 Amp Buss Fuse

bp PART NO: 415-468


Description: 125 mA Anti-Surge Glass Fuse
(20mm)

bp PART NO: 416-354


Description: 3 Amp Quick Blow Glass Fuse
(20mm)

bp PART NO: FNM/40


Description: 40 Amp Buss Fuse
(38mm)

bp PART NO: 414-724



Description: 10 Amp 240 Volt Fuse
(40mm Hole Centres)

bp PART NO: 414-746



Description: 20 Amp 240 Volt Fuse
(40mm Hole Centres)

bp PART NO: LCT/20

 


Description: LCT Fuse 20 Amp 240 Volt
(40mm Hole Centres)

bp PART NO: 156-8771



Description: 16 Amp Fuse
(40mm Hole Centres)

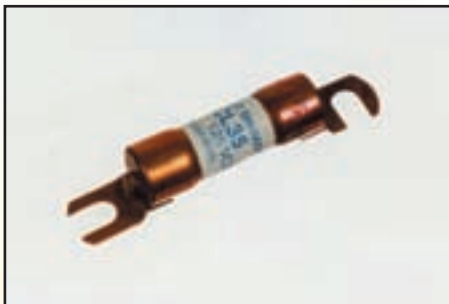

bp ACL FUSES

PART NO:	DESCRIPTION:
ACL/35	35 Amp ACL Fuse (65mm Hole Centres)
ACL/50	50 Amp ACL Fuse (65mm Hole Centres)
ACL/100	100 Amp ACL Fuse (75mm Hole Centres)



bp ALS FUSES

PART NO:	DESCRIPTION:
ALS/250	250 Amp ALS Fuse
ALS/300	300 Amp ALS Fuse
ALS/400	400 Amp ALS Fuse
ALS/500	500 Amp ALS Fuse

(100mm Hole Centres)

bp PART NO: ACK/AMP



Description: ACK Fuse 40 - 400 Amp
(Specify Amperage - size changes
with Amperage)

bp PART NO: 9005909-AMP



Description: SIBA Small Enclosed Fuse
(30mm Hole Centres)

bp PART NO: SIBA/AMP



Description: SIBA Fuse 35 Amp - 500 Amp
(Specify Voltage)
(65mm Hole Centres)


bp PART NO: MEGA FUSE



PART NO:	DESCRIPTION:
298/100	100 Amp Mega Fuse
298/175	175 Amp Mega Fuse
298/200	200 Amp Mega Fuse

(53 mm Hole Centres)

 bp PART NO: LKN/100

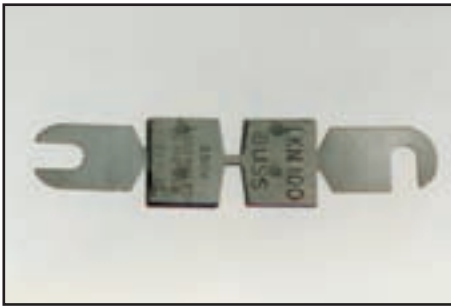

Description: 100 Amp Link Fuse 250 Volt
(65mm Hole Centres)



bp HRC FUSES 440 VOLT

PART NO:	DESCRIPTION:
GTIA/32	32 Amp HRC Fuse
GTIS/40	40 Amp HRC Fuse
GTIS/63	63 Amp HRC Fuse

bp PART NO: GTCP/100



Description: HRC Fuse 100 Amp 440 Volt
(94mm Hole Centres)

bp PART NO: BD/40



Description: 40 Amp Fuse 550 Volt
(110mm Hole Centres)

bp PART NO: BD/50



Description: 50 Amp Fuse 550 Volt
(110mm Hole Centres)

bp PART NO: CD/80



Description: 80 Amp Fuse 550 Volt
(110mm Hole Centres)

bp PART NO: GTF/200



Description: 200 Amp TF Fuse
(115mm Hole Centres)

bp PART NO: LET/AMP



Description: LET 35 Amp to 180 Amp
(Specify Amperage)
(40mm Hole Centres)

bp PART NO: LMT/AMP



Description: LMT Fuse 160 Amp to 400 Amp
(Specify Amperage)
(60mm Hole Centres)

bp PART NO: LMT/500



Description: LMT Fuse 500 Amp
(60mm Hole Centres)

bp PART NO: BOTTLE FUSE



PART NO:	DESCRIPTION:
35/D33	35 Amp Bottle Fuse
50/D33	50 Amp Bottle Fuse
63/D33	63 Amp Bottle Fuse
	(50mm Height)

bp PART NO: 2D16



Description: 2 Amp Bottle Fuse
(50mm Height)

bp PART NO: 418-625



Description: 13 Amp Fuse Holder

bp PART NO: 12-16/30



Description: 30 Amp Weekes Fuse
(50mm Body)



bp WEEKES FUSES

PART NO:	DESCRIPTION:
12-17/40	40 Amp Fuse
12-17/50	50 Amp Fuse
12-17/60	60 Amp Fuse
	(50mm Body)



bp WEEKES FUSES

PART NO:	DESCRIPTION:
12-15/40	40 Amp Fuse
12-15/50	50 Amp Fuse
12-15/60	60 Amp Fuse
	(100mm Body)



bp FUSE NH00GG 500 VOLT

PART NO:	DESCRIPTION:
M000GL/32	32 Amp Fuse
M000GL/50	50 Amp Fuse
M000GL/80	80 Amp Fuse
M000GL/100	100 Amp Fuse
M000GL/125	125 Amp Fuse
	(80mm End to End)